








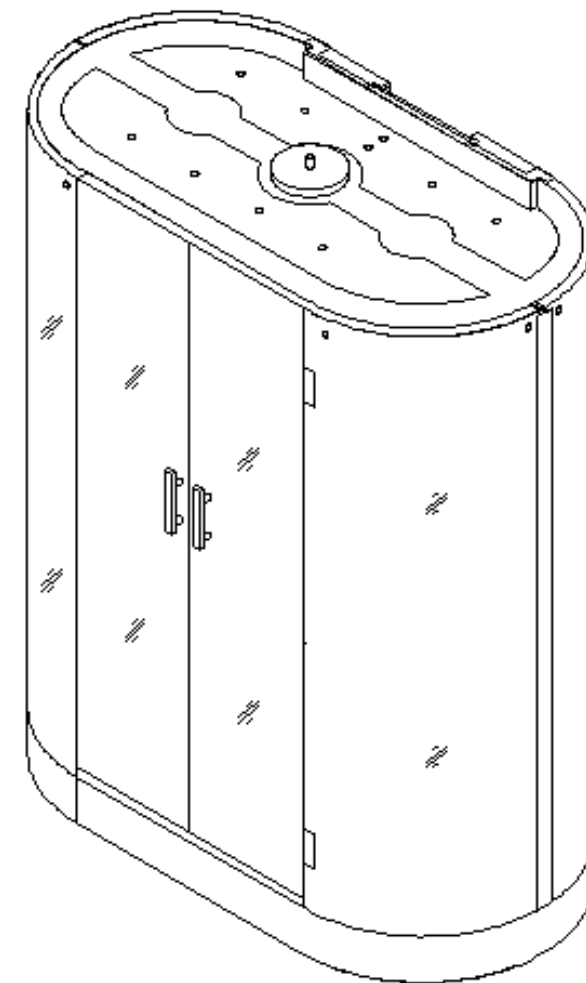


Shower Room Installation


9046 SIZE: (1600*900*2150)





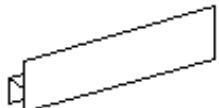


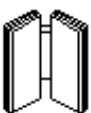




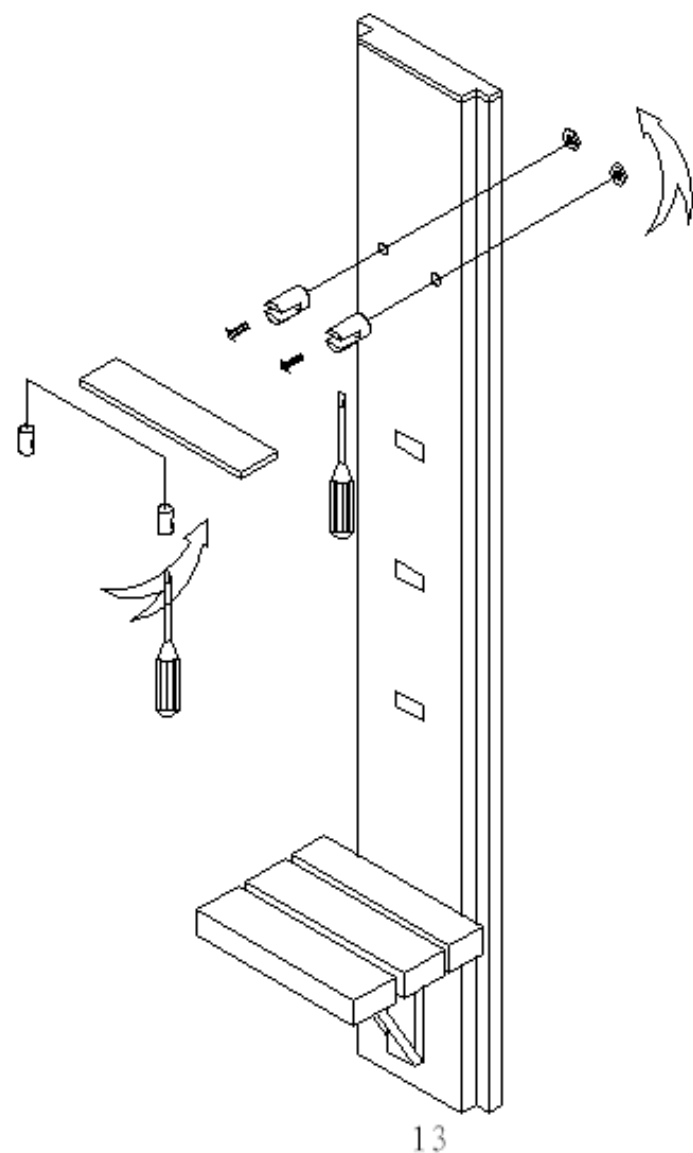



Item	Name	Accessory	Quantity
1	Tup		1
2	Roof		1
3	aluminium alloy		2
4	Backbodrd		1
5	Side fixed door glass		2
6	fixed door glass		2
7	sliding door		2
8	profile frame 1		2
	profile frame 2		2

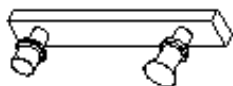water supply hose and cable connection method will according the label


fix the glassshelf screw to the centra tower and insert the glassshelf, and then fasten the screw with screw driver.




Item	Name	Accessory	Quantity
9	Handle		2
10	Handle shower		1
11	handle shower seat		1
12	Door belt		2
13	Waterproof belt		2
14	decoration hat		6
15	insertion strip		6
16	hinges		2
17	Glass shelf		2

Item	Name	Accessory	Quantity
18	Glass fixed shelf		2
19	M4*20mm screw		10
20	M5*20mm screw		6
21	St4*16mm screw		8
22	St4*12mm screw		10

install the handle shower to the backboard.
and then connection the hose with the
handle shower seat

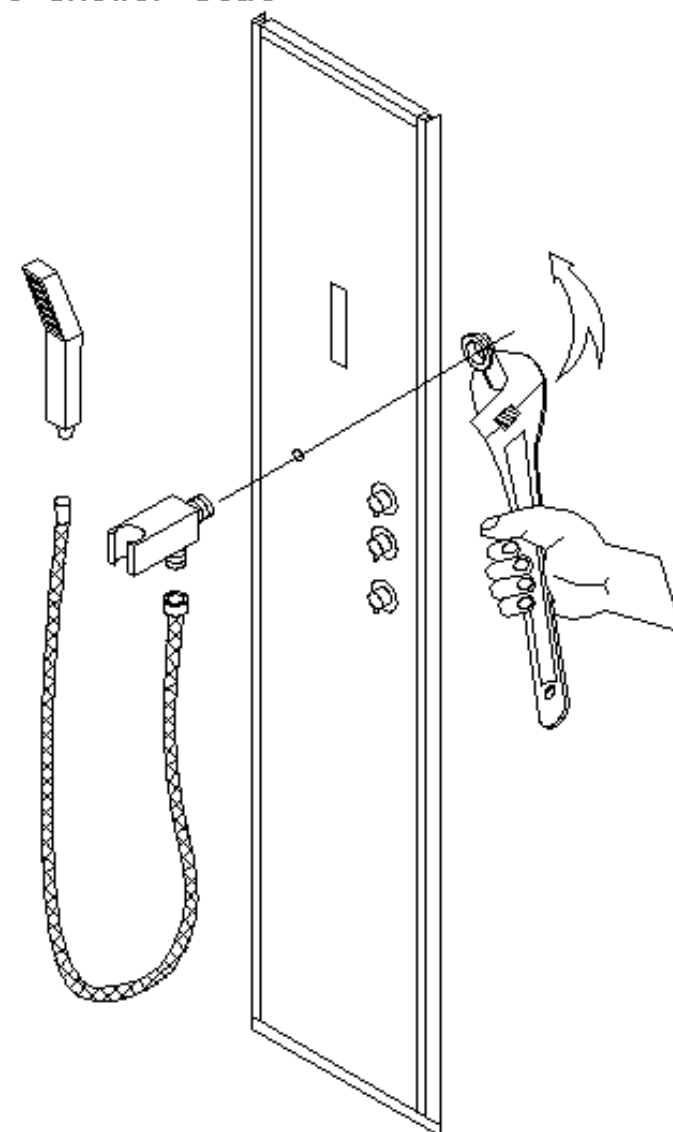


Install the door stopper and door handle at last

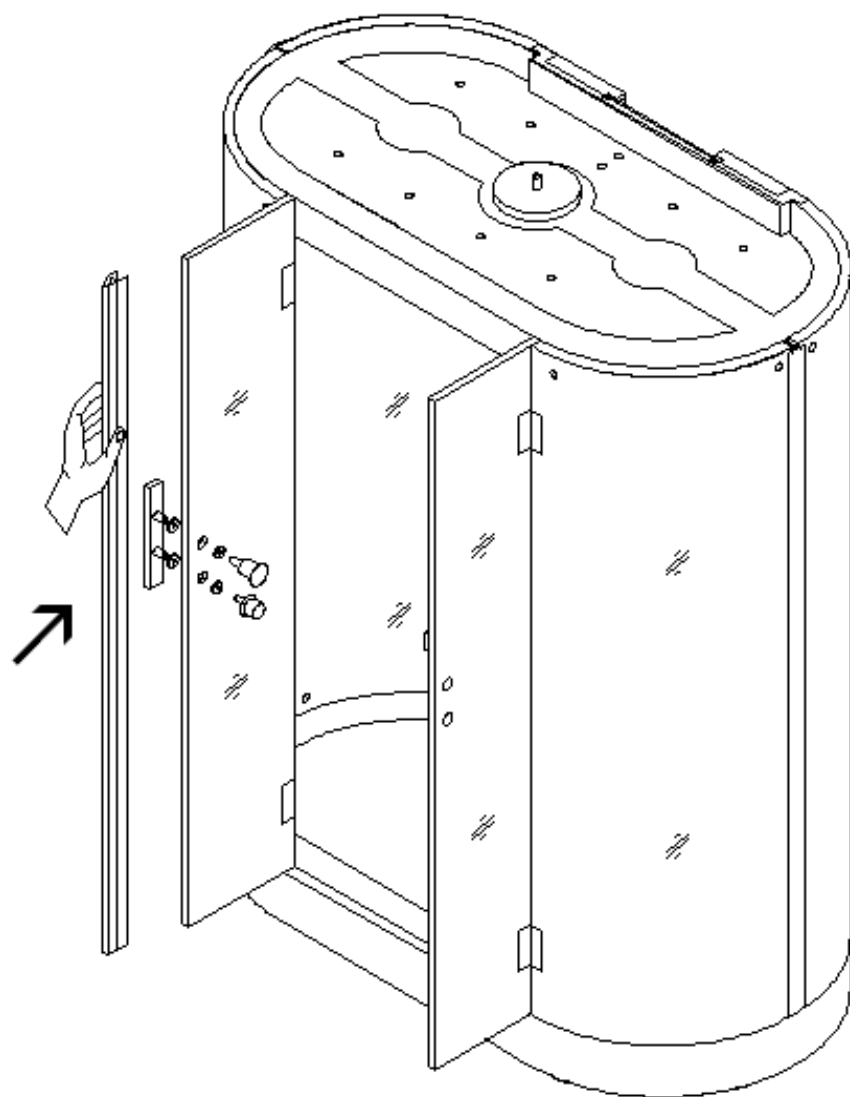


11

C=cold water inlet
H=hot water inlet
D=drain

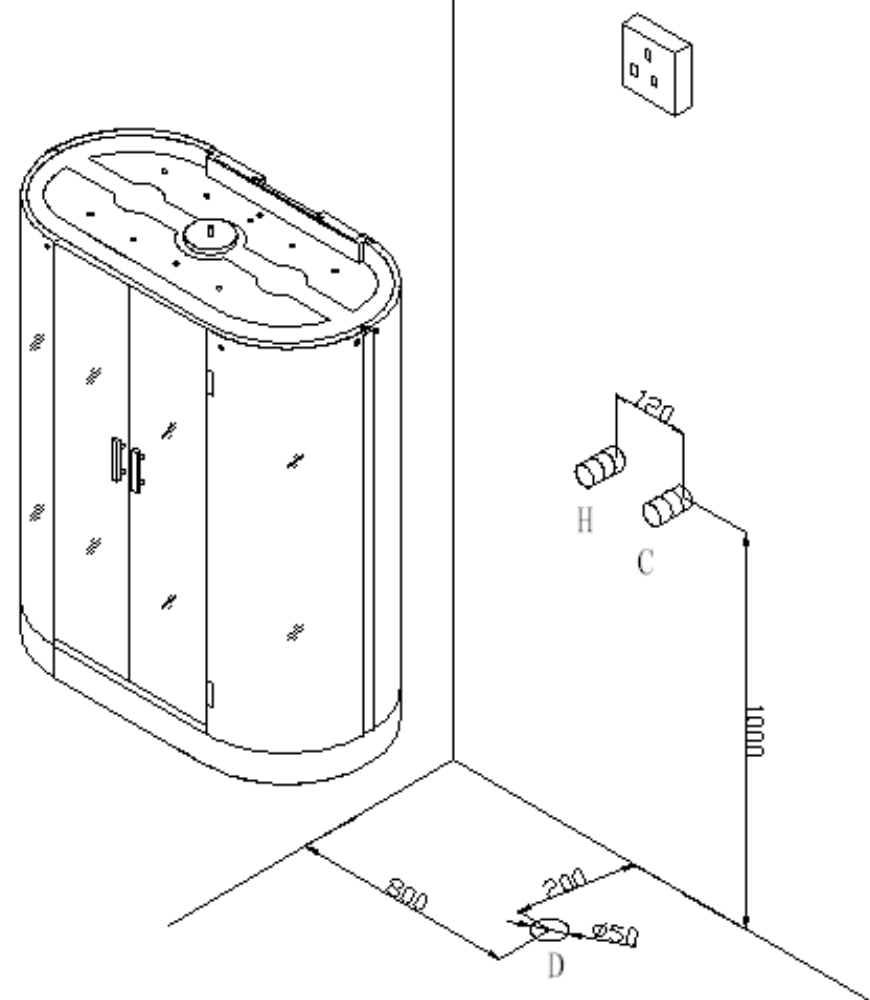


4

Put the base at the right place,
adjust the feet and tighten the
screws.

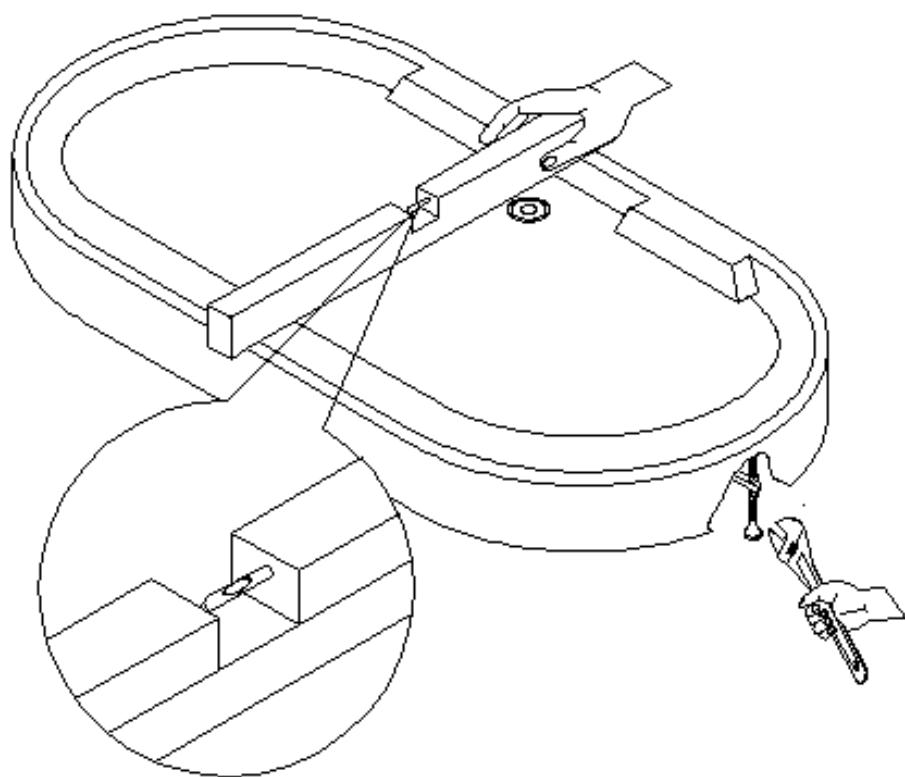


5

Install the hinges with the fix glass.
Then put the moveable glass door to
the hinges and tighten the screws.

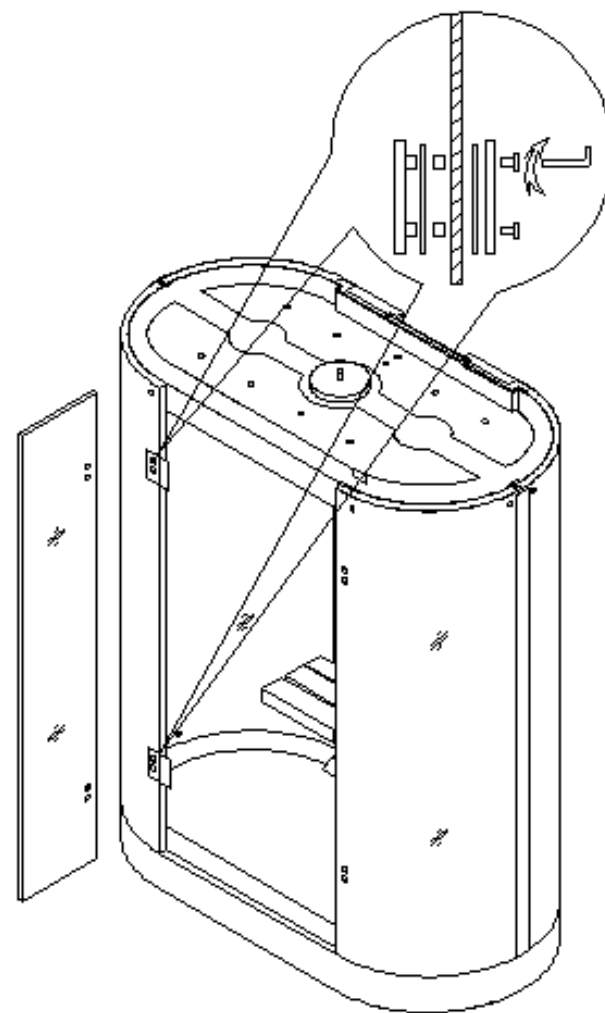


10

Put the fixer to the glass on the bottom with screws (4*20) and screws cap. then use the screws (5*20) at last

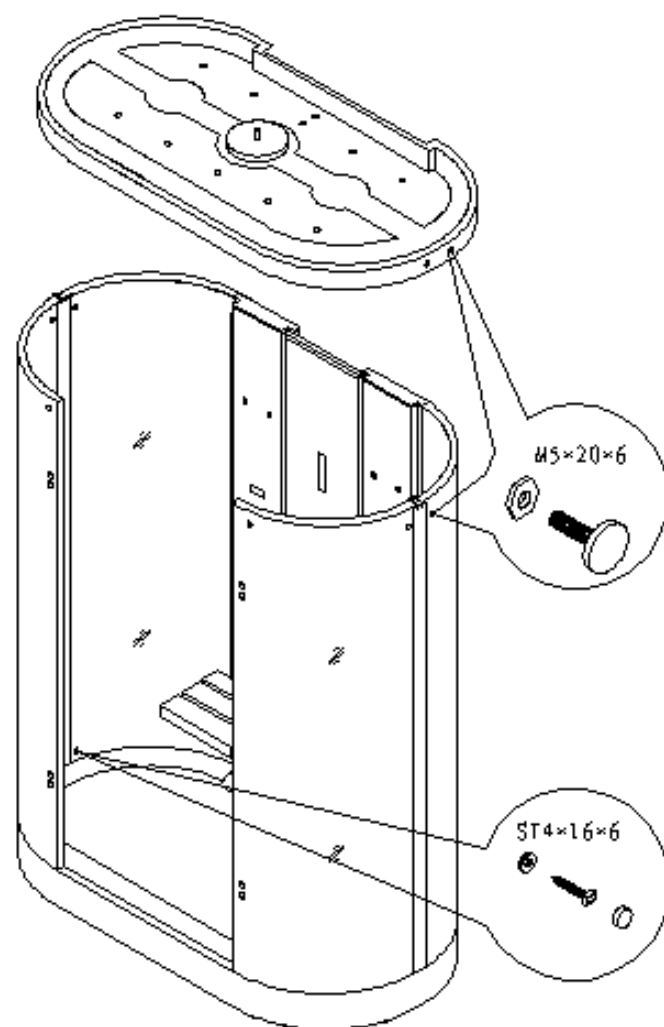


9

Connection the aluminium functional back with the backboard glass and fixing with screws (4*20)

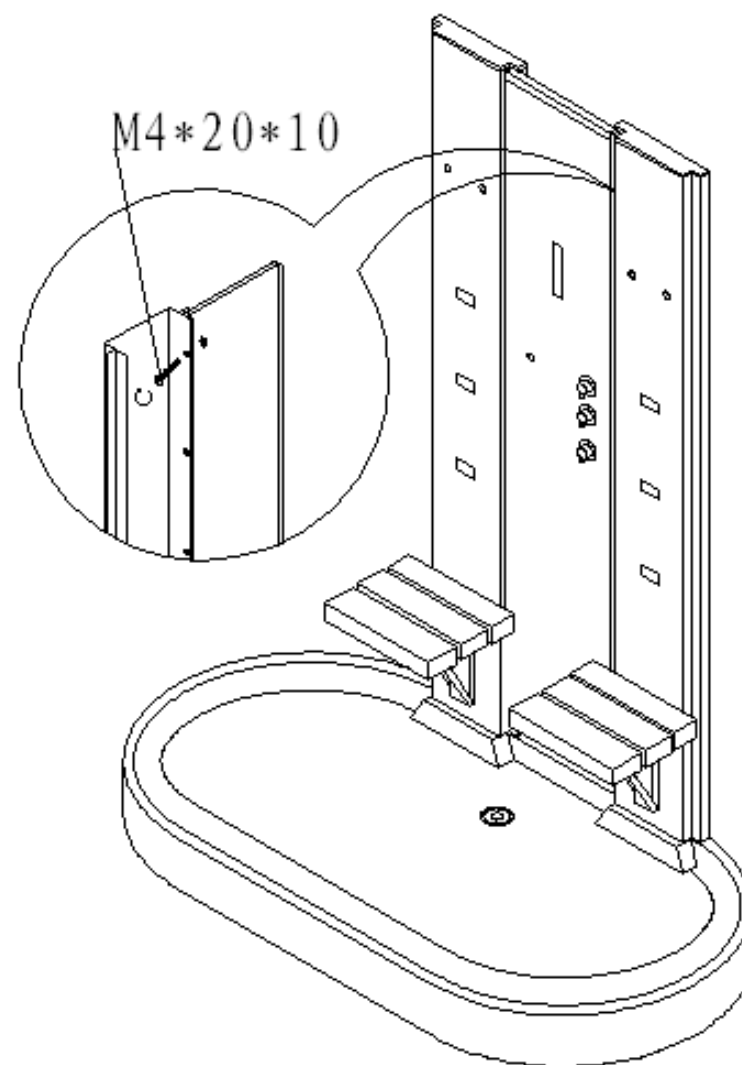


6

Entering the glass to the aluminium profile and then put the belt.

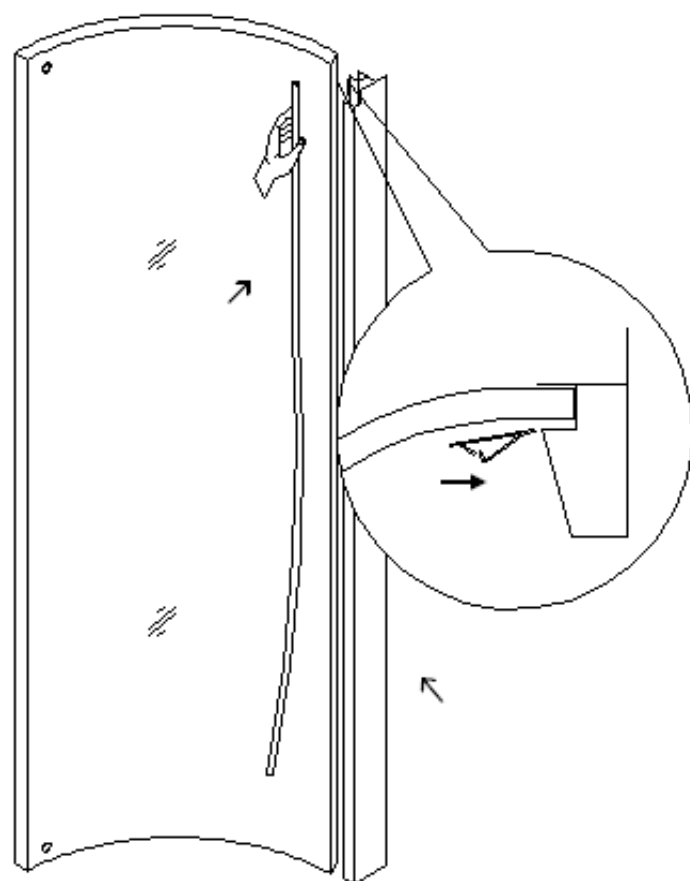

7

Fixing the fix glass door to the aluminium file with the screw (4*12). then put the [H] aliminum to the glass. Then install the belt.

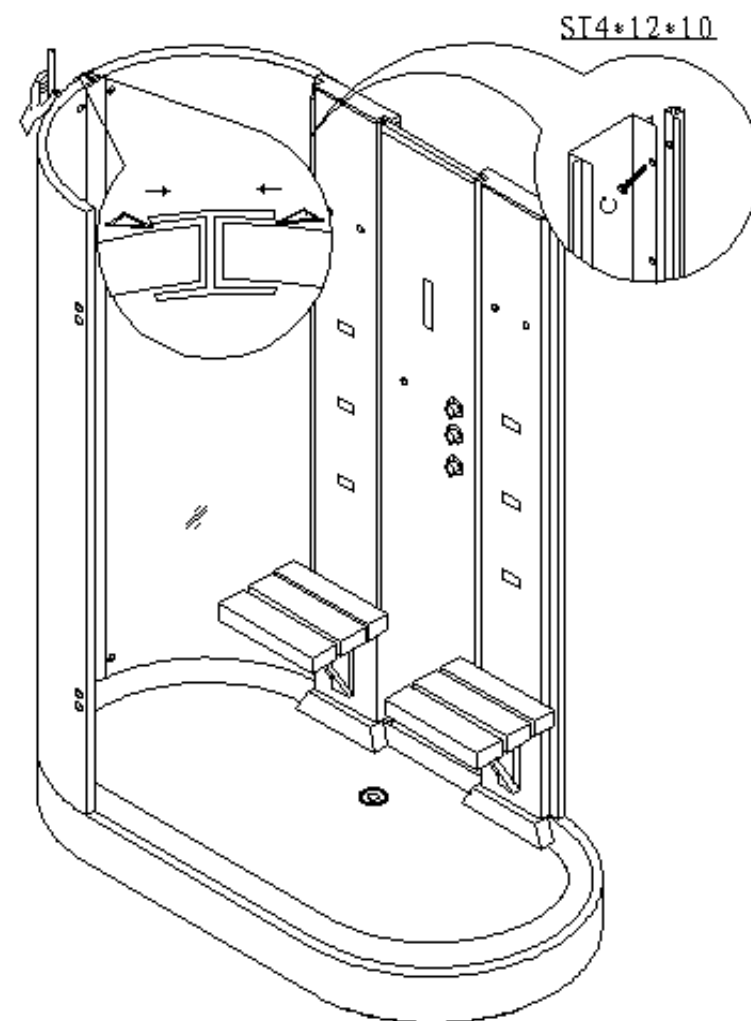

8